

 
8 - Domestic label -

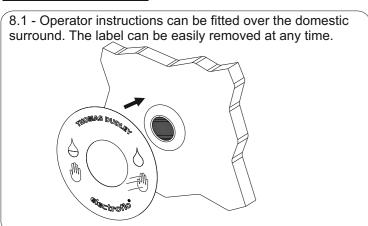


 
9 - Operation -

9.1 - Full flush - Wave hand within 50mm of sensor. When activated a blue light will show on the sensor.

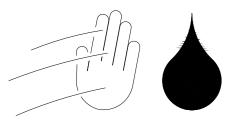



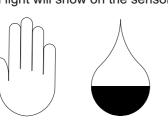




Seconds


10 - Low battery indicator -

10.1 - When the batteries are low the sensor will rapidly flash red at the end of a flushing operation.

IMPORTANT Never place any object in front of the sensor

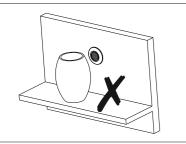

11 - Sensor extension kit (optional) -

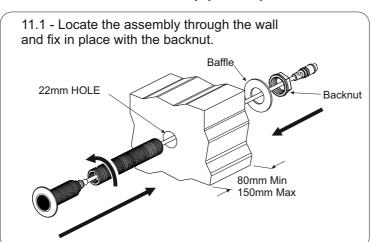


12 - Troubleshooting

12.1 If the cistern does not flush in either full or reduced mode, then the switch settings within the control box can be altered to increase the pump running time. Firstly, remove the battery tab and cover as described in Fig 5.1 Change the switches over for full or reduced flush as shown in Fig 13.2, It is recommended that the switches are only increased 1 position from the factory settings. Refit the battery tab and cover as described in Fig 4.3.

IMPORTANT

Ensure no dirt or moisture enters the control box during this change of settings

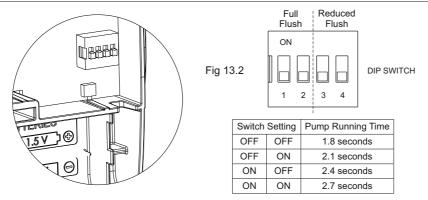


Important: Only use genuine Dudley spares or replacement parts




Dauntless Works, P.O.Box 28, Birmingham New Road, Dudley, West Midlands, DY1 4SN

Telephone: 0121 530 7000 Fax: 0121 557 5345 E-mail: sales@thomasdudley.co.uk


Electrofo®

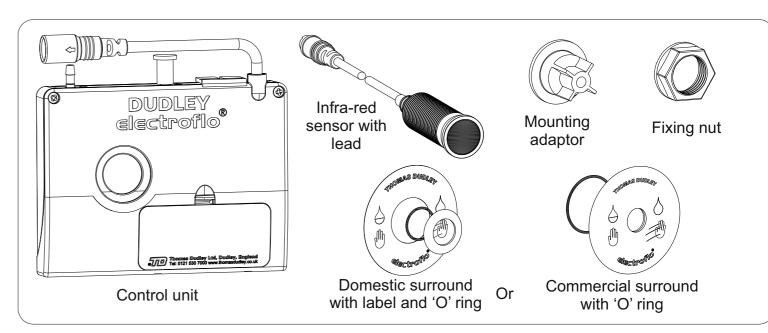


Minimum installation dimensions

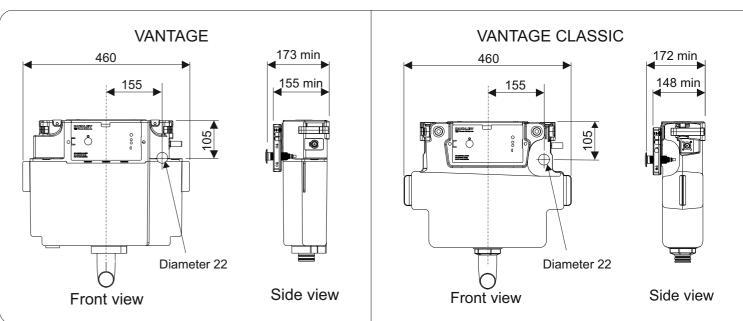

1 - Installation options -

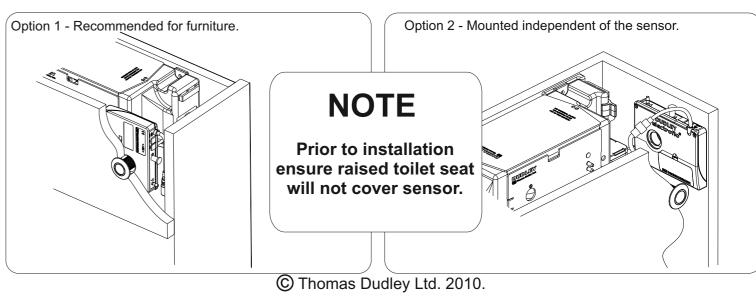


2 - Installation -

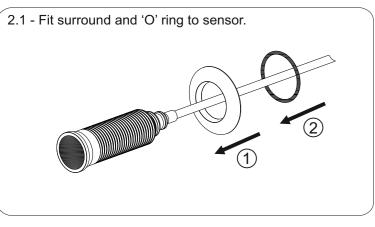


2.2 - Fit sensor through panel/wall. 22mm HOLE 3mm Min (See section 9 for 50mm Max deeper installations)


2.3.1 - Installation option 1 -

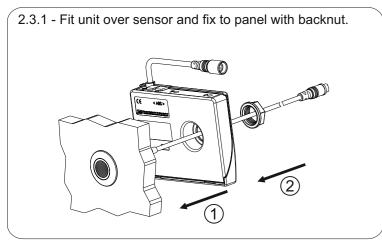

2.3.2 - Installation option 2 -

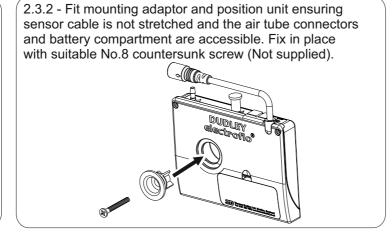


3 - Mains connection -

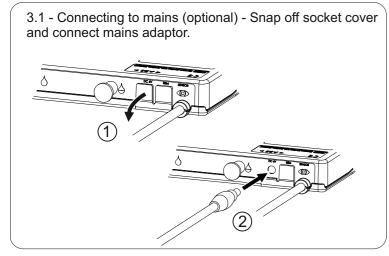


Installation of the mains adaptor must be carried out and checked by a qualified electrician.


Important during installation do not expose the electronics to fluids, dust, dirt or damp.


4 - Remote button connection -

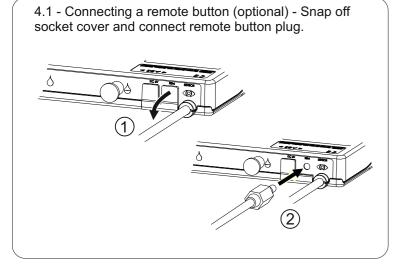


5 - Single flush -

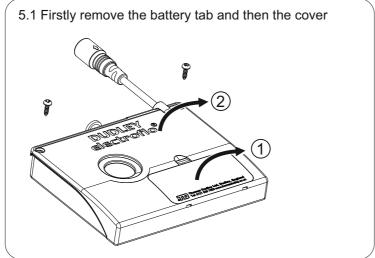

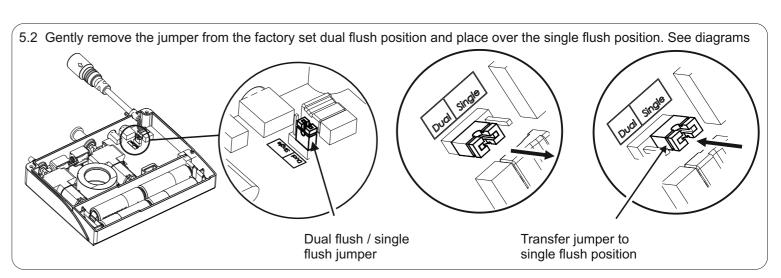

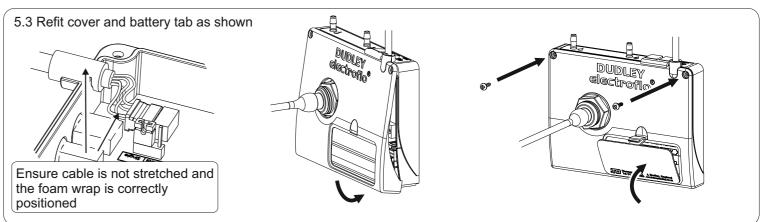



6 - Air tube connection -

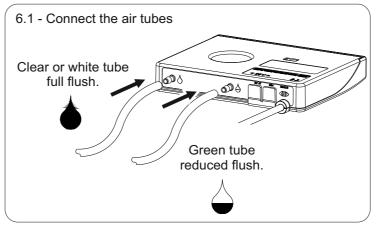




7 - Installation of batteries -

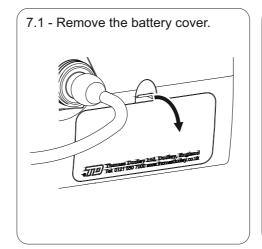

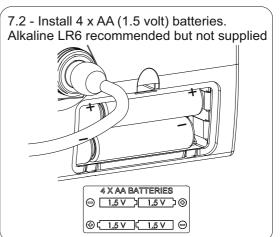

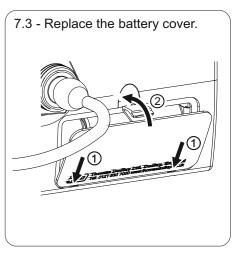

7.4 - On installation of batteries the sensor will flash red, green, blue repeatedly for 5 seconds. After this a red light will flash every 8 seconds to show the unit is active.