




ROYAL



METAL ROYAL



ROYAL PALM




REMORA

### IMPORTANT NOTES

Do not use any cleaning agents on this product. Clean using a non-abrasive cloth and warm water only.  
Mark out prior to installation to ensure adequate space and clearance for products.

### REFERENCE DIMENSIONS

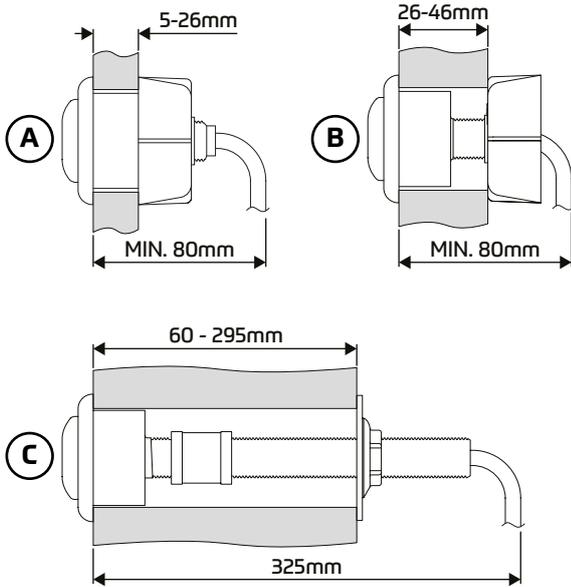

1

Ø40mm THRU  
Ø45mm THRU (REMORA ONLY)

MIN. 56mm CTRS  
TWIN BUTTONS ONLY

2

3

A

B

C

4

A

B

C

AIR TUBE FACTORY FITTED ON EXTENDED VERSIONS


TWIN BUTTONS ONLY

5

6

### Final Installation Checklist

- ~ Check flush valve instructions for correct valve connection procedure.
- ~ Ensure air tubes are connected securely and routing is free from kinks and acute bends.
- ~ Check flush operation.
- ~ Visit [www.tyde.co.uk](http://www.tyde.co.uk) for service & maintenance information.










#### IMPORTANT NOTES

Do not use any cleaning agents on this product. Clean using a non-abrasive cloth and warm water only.

Mark out prior to installation to ensure adequate space and clearance for products.

#### REFERENCE DIMENSIONS

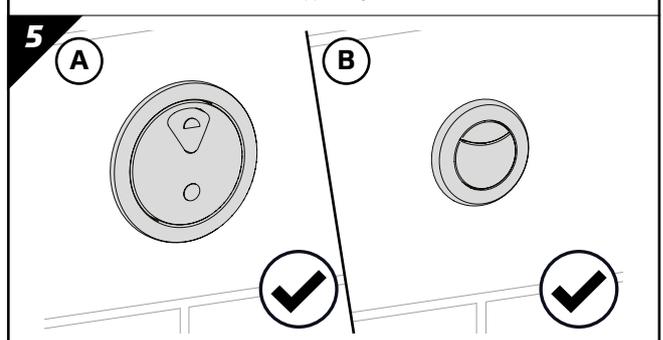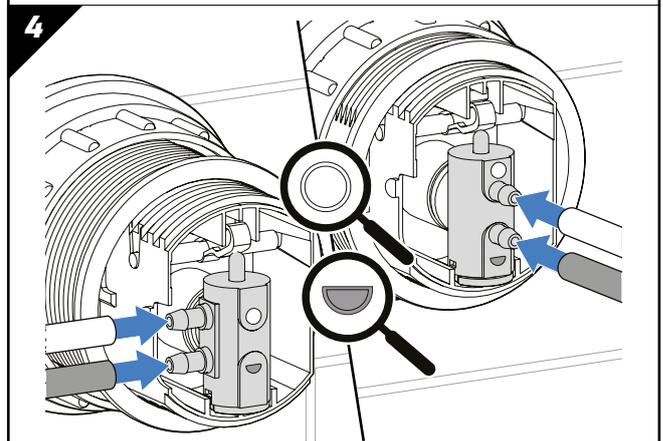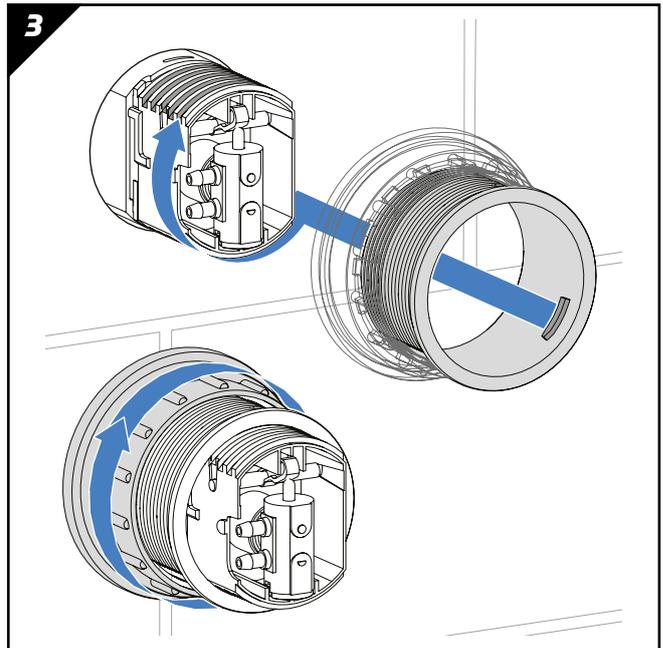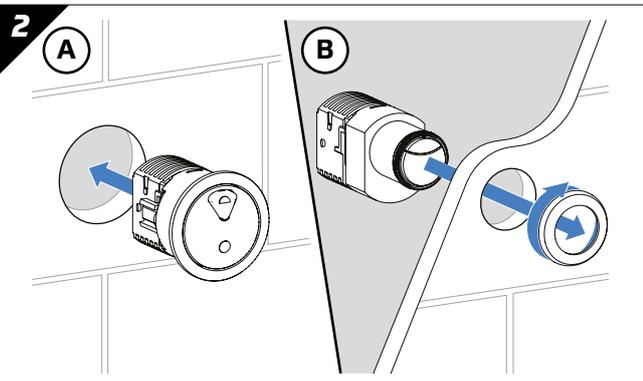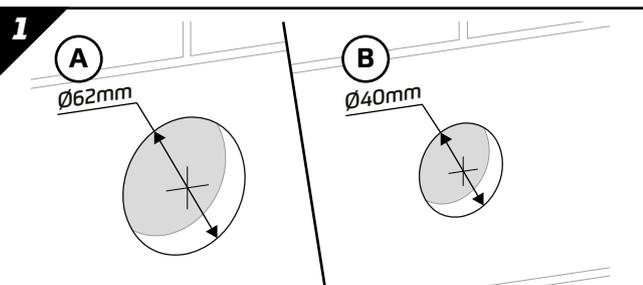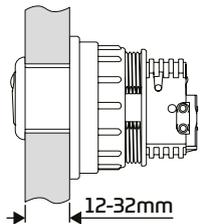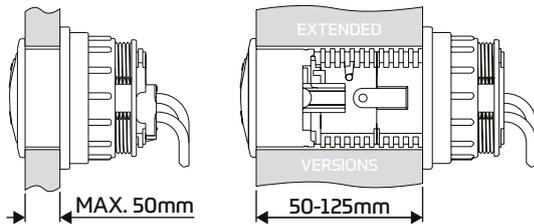

#### 6 Final Installation Checklist

- ~ Check flush valve instructions for correct valve connection procedure.
- ~ Ensure air tubes are connected securely and routing is free from kinks and acute bends.
- ~ Check flush operation.
- ~ Visit [www.tyde.co.uk](http://www.tyde.co.uk) for service & maintenance information.